

Installing the SxS Device Driver Software

Proceed as follows to install the SxS Device Driver Software on your computer.

Notes

- Do not insert an SxS memory card into the ExpressCard slot before installing this Software.
- The information displayed in the following procedures may differ depending on your operating system and the settings that you choose.
- *For support information for the SxS Device Driver Software, visit the following URL:*
<http://www.sony.net/SxS-Support/>

Installing on Windows

- 1** Select and click “Windows XP/Vista/7” from SxS Device Driver Software Installer.
- 2** If a warning message appears, click Yes, Run, or one of the other buttons.

Follow the instructions that appear on the screen to complete the installation.
- 3** After the installation finishes, insert an SxS memory card into the ExpressCard slot.

The SxS memory card is recognized as a removable drive.

Installing on Mac OS

- 1** Select and click “Mac OS X” from SxS Device Driver Software Installer.

Finder opens.
- 2** Double click the SxS_Device_Driver_v[version].dmg file.

The SxS Device Driver screen appears.

- 3** Double click SxS Device Driver Installer.

Follow the instructions that appear on the screen to complete the installation.
- 4** After the installation finishes, restart your computer.
- 5** After the computer restarts, insert an SxS memory card into the ExpressCard slot.

The SxS memory card is recognized as a removable drive.